

Model IRC 550 Universal Remote Control



Programming and Operating Instructions

To have a clearer idea of the features and capabilities of your remote control, take a moment to read these instructions. Save for future reference.

© 2006 Contec Holdings, LLC, Rev. 04/06

1. Introduction

Your universal remote control is simple to program, easy to use, and can operate up to five (5) devices, which include:

SAT	Satellite receivers
TV	Televisions
DVD	DVD
AUDIO	Audio receivers, amplifiers, CD players
AUX	VCRs, 2 nd TV, 2 nd DVD, 2 nd Audio device

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

2. Before Getting Started

Some of the special features and buttons on your remote control are as follows:

Point and Press[®] Programming

Lets you program your TV, VCR, DVD, AUDIO devices without codes. For more information, see Sections 5 and 14.

Memory Guard[®]

Eliminates reprogramming after battery changes.

Time Out

If the same button is pressed and held for 30-seconds, your remote control will turn itself off automatically. This extends the battery life should the remote become lodged under or between heavy objects, for example sofa cushions.

3. Installing, Replacing Batteries

Install two (2) new "AA" batteries as indicated by the diagram in the battery compartment.

When the batteries become low and need to be replaced, the [SAT], [TV], [DVD], [AUDIO], [AUX] buttons will not illuminate normally or at all during use.

When this happens, replace the existing batteries with two (2) new "AA" batteries to restore normal operation to the remote control.

4. If You Have More Than One Satellite Receiver

Your remote control is set at the factory to control all of the functions on your Motorola satellite receiver. However, if you have more than one satellite receiver, you may want to prevent the remote control in one room from affecting the satellite receiver in another room. To prevent this kind of interference, you must "pair" each remote control with each receiver by assigning a new "address" to each combination. This "address" assignment is made using your remote control as follows:

1. Press the [SAT] button to select the remote control's SAT mode.
2. Press the [Options] button to display the Options screen on your TV.
3. On the Options screen, use the [▲], [▼], [◀], [▶] buttons to highlight the Change System Settings / System Setup option, then press [Enter].
4. On the Systems Setting / Setup screen, use the [▲], [▼], [◀], [▶] buttons to highlight the Change Installation Settings / System Settings (applies to DSR 5xx, 207, 317 receivers) option, then press [ENTER].
5. On the System Settings (applies to DSR 5xx, 207, 317 receivers) screen, use the [▲], [▼], [◀], [▶] buttons to highlight the Installation Settings option, then press [ENTER]
6. On the Installation Settings screen, use the [▲], [▼], [◀], [▶] buttons to highlight the Remote Control Address option, then press [ENTER]
7. **Once you are on the Remote Control Address screen, disregard the instructions on the screen and follow these steps using the remote control keypad....**

- a. In this order, press and hold the [MUTE] button, then the [ENTER] button. Hold both buttons down together until the mode buttons illuminate in rotation (i.e. SAT → TV → DVD → AUDIO → AUX → SAT...). Release both buttons as soon as the mode buttons illuminate.
- b. Enter any one of the following addresses: [000], [001], [002], [003], [004], [005], [006], [007]. Entry of the 3-digit of each address stores the address automatically and causes the mode buttons to blink and go out.
- c. Press the [ENTER] button to set the same address in your Satellite Receiver. The new address will be displayed in the upper right corner of your TV screen.
- d. Exit from the Remote Control Address screen.

5. Programming Your TV, DVD, AUDIO Devices

Code-Entry Programming

1. Turn on all the electronic devices (TV, DVD, AUDIO) you want to program the remote to operate.

Using the remote control keypad....

2. In this order, press and hold the [ENTER] button, then the [MUTE] button. Hold both buttons down together until the mode buttons illuminate in rotation (i.e. SAT → TV → DVD → AUDIO → AUX → SAT...). Release both buttons as soon as the mode buttons illuminate.
3. a. To program your TV, locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off. If multiple codes are listed for your brand, you may have to enter several different codes until your TV turns off.
 b. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].

1. If the TV turns back on, press [ENTER] to lock in the code. The mode buttons will blink 3-times and go out.

Or

2. If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [ENTER] to lock in the code. The mode buttons will blink 3-times and go out.

4. To program your DVD, refer to the DVD Setup Code lists and repeat steps 2 and 3 above.
5. To program your AUDIO devices, refer to the AUDIO Setup Code list and repeat steps 2 and 3 above.

Point and Press® Programming

This method allows you to program your remote control without codes using the [▲] or [▼] buttons ("Power" function during programming). For more information on this method as well as other buttons you can program your remote with, see Section 14.

1. Turn on all the electronic devices (TV, DVD, AUDIO) you want to program the remote to operate.

Using the remote control keypad....

2. In this order, press and hold the [ENTER] button, then the [MUTE] button. Hold both buttons down together until the mode buttons illuminate in rotation (i.e. SAT → TV → DVD → AUDIO → AUX → SAT...). Release both buttons as soon as the mode buttons illuminate.
3. Press [▲] one step at a time until one of your electronic devices turns off. Each time you press [▲] button, the mode buttons will illuminate in rotation. As soon as one device turns off, stop pressing the [▲] button.
4. Press [MUTE]. If the device that turned off...
 - a. Turns back on, press [ENTER] to lock in this

code. The mode buttons will blink 3-times and go out.

Or

- b. Does not turn back on, press [▼] one step at a time until that device turns back on. Each time you press the [▼] button, the mode buttons will illuminate once in reverse rotation (AUX → AUDIO → DVD → TV → SAT → AUX).

Once you have found a code that turns the device on / off, press [ENTER] to lock in this code. The mode buttons will blink 3-times and go out.

5. Repeat steps 2 to 4 above for each of the remaining electronic devices you wish to program the remote to operate.

Note: Given the size of the code libraries in your remote control, it will take several minutes to cycle through all the codes when using the Point and Press Programming method.

6. Programming Your Auxiliary Device – VCR, 2nd TV, 2nd DVD, 2nd Audio Device

1. Turn on the electronic device (VCR, 2nd TV, 2nd DVD, 2nd AUDIO) you want to program as an AUXILIARY device.

Using the remote control keypad....

2. In this order, press and hold the [ENTER] button, then the [MUTE] button. Hold both buttons down together until the mode buttons illuminate in rotation (i.e. SAT → TV → DVD → AUDIO → AUX → SAT...). Release both buttons as soon as the mode buttons illuminate.
3. Press [ENTER] again.
4. Follow the Code Entry Programming (paragraph 3) or Point and Press Programming® (paragraphs 3 & 4) areas of Section 5 to program your AUX device.

7. Programming Your TV / VCR Combination

1. Turn on your TV / VCR combination device and set it to its TV mode.
2. Program your remote to operate the TV functions. Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (Power, Vol ▲/▼, Mute, Ch ▲/▼, 0-9) of your TV / VCR unit.
3. Set your combination device to its VCR mode and install a VHS tape.
4. Program your remote to operate the VCR functions. Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV / VCR unit.

Before you can test for the correct VCR setup code, you must first press the [VCR] button first to put the remote in its VCR mode.

8. Programming Your TV / DVD or TV / VCR / DVD Combination

1. Turn on your TV / DVD combination device and set it to its TV mode.
2. Program your remote to operate the TV functions. Using the Code Entry Programming method described in Section 5, find a TV Setup Code that operates the TV functions (Power, Vol ▲/▼, Mute, Ch ▲/▼, 0-9) of your TV / DVD unit.
3. Set your combination device to its DVD mode and install a DVD.
4. Program your remote to operate the DVD functions. Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit DVD Setup Code for your brand until a code is found that operates the transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV / DVD unit.

Before you can test for the correct DVD setup code, you must first press the [DVD] button to put the remote in its DVD mode.

5. Last, if you have a TV / VCR / DVD combination unit, you need to program your remote to operate the VCR functions.
7. Set your combination device to its VCR mode and install a VHS tape.
8. Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit VCR Setup Code for your brand until a code is found that operates the VCR transport functions (PLAY, STOP, REW, FWD, PAUSE, REC) of your TV / DVD / VCR unit. Before you can test for the correct VCR setup code, you must first press the [VCR] button first to put the remote in its VCR mode.

9. Code Number Readback

To identify the 3-digit TV setup codes stored under the Point and Press[®] programming method, follow these steps using the remote control keypad...

1. In this order, press and hold the [ENTER] button, then the [TV] button. Hold both buttons down together until the [TV] button illuminates. Release both buttons as soon as the [TV] button illuminates.
2. Press [INFO]. The mode buttons will "blink back" the code numbers, with a 1-second interval between each digit of the code. Please note that for the numeric "0", the mode buttons will illuminate blink in fast-sequence.

Example: For code "130", the remote will blink 1 time, then 3 times, then in a fast-sequence for the 0.

To identify the 3-digit SAT code, press [ENTER], then [SAT] **as defined in step 1 above**, then press [INFO].

To identify the 3-digit DVD code, press [ENTER], then [DVD] **as defined in step 1 above**, then press [INFO].

To identify the 3-digit AUDIO code, press [ENTER], then [AUDIO] **as defined in step 1 above**, then press [INFO].

To identify the 3-digit AUX code, press [ENTER], then [AUX] **as defined in step 1 above**, then press [INFO].

10. Master Power

Your remote has a Master Power feature that can be programmed so that a single press of the [POWER] button (in remote's SAT mode) can turn all of your electronic devices on / off together.

To program the Master Power feature, follow these steps using the remote control keypad:

1. In this order, press and hold the [ENTER] button, then the [POWER] button. Hold both buttons down together until the [SAT] button illuminates. Release both buttons as soon as the [SAT] button illuminates.
2. Press [1]. The [SAT] button will blink 3-times and go out.

To use the Master Power feature, follow these steps:

1. Press [SAT] to select the remote's SAT mode.
2. Press [POWER] – the remote will turn on / off your SAT, TV, DVD, AUDIO an AUX devices with one button press.

To reset the Master Power feature to its default setting, follow these steps using the remote control keypad:

1. In this order, press and hold the [ENTER] button, then the [POWER] button. Hold both buttons down together until the [SAT] button illuminates. Release both buttons as soon as the [SAT] button illuminates.
2. Press [0]. The [SAT] button will blink 3-times and go out.

11. Programming Volume Control

When you first program your remote, volume / mute are controlled through your TV (except AUDIO which defaults to the AUDIO device). The volume control options in each mode of the remote are:

Mode	Volume Control Default	Volume Control Options
SAT	TV (#1)	SAT AUDIO AUX (2 nd TV / Rec / Amp)
TV	TV (# 1)	SAT AUDIO AUX (2 nd TV / Rec / Amp)
DVD	TV (# 1)	SAT AUDIO AUX (2 nd TV / Rec / Amp)
AUDIO - Rec / Amp	Rec / Amp	SAT TV AUX (2 nd Rec / Amp)
AUDIO - CD	TV (# 1)	SAT TV AUX (2 nd Rec / Amp)
AUX – VCR	TV (# 1)	SAT AUDIO (Rec / Amp)
AUX - TV # 2	TV (# 2)	SAT AUDIO (Rec / Amp)
AUX - DVD # 2	TV (# 1)	SAT, AUDIO (Rec / Amp)
AUX - Rec # 2	Rec / Amp # 2	SAT, TV
AUX - CD #2	CD # 2	SAT, TV

To control volume / mute through your Satellite receiver in the remote's Satellite mode...

- In this order, press and hold the [ENTER] button, then the [SAT] button. Hold both buttons down together until the [SAT] button illuminates. Release both buttons as soon as the [SAT] button illuminates.

- Press [VOL ▲], then [SAT] for Satellite volume. The [SAT] button will blink 3-times and go out.

To return volume control to your TV, repeat step 1, then press [VOL ▲], then [TV] in step 2.

To return volume control to your TV, repeat step 1, then press [VOL ▲], then [TV] in step 2.

12. Operating Your Satellite Receiver

To operate your Satellite receiver, press [SAT] to select the Satellite mode. Then refer to Section 15 for the operation of your Satellite receiver.

13. Operating Your Electronic Devices

To operate your other electronic devices, press the mode button for the device you wish to operate, then refer to the table below for the available buttons / functions in each mode:

Button Label	TV Mode	DVD Mode	AUDIO Mode	AUX Mode (VCR)
Power	Power	Power	Power	Power
Vol ▼/▲	Vol ▼/▲	Vol ▼/▲ (TV)	Vol ▼/▲	Vol ▼/▲ (TV)
Mute	Mute	Mute (TV)	Mute	Mute (TV)
Ch ▼/▲	Ch ▼/▲		-	Ch ▼/▲
0 – 9	0 - 9		-	0 - 9
Last	Last Ch		-	-
Enter / OK	Enter (in Menu)		-	-
Video Source	TV Input		-	TV / VCR
Options	Menu		-	-
▲,▼,◀,▶	▲,▼,◀,▶		-	-
Guide	Enter (after Ch entry)		-	-
[▶]	-	Play	Play – CD	Play
[■]	-	Stop	Stop - CD	Stop
[▶▶]	-	FF	FF – CD	FF
[◀◀]	-	Rew	Rew – CD	Rew
[]	-	Pause	Pause-CD	Pause

Button Label	TV Mode	DVD Mode	AUDIO Mode	AUX Mode (VCR)
[●]	-	Rec	Rec - CD	Rec

14. Additional Programming Information

- The mode buttons will illuminate in rotation (i.e. SAT → TV → DVD → AUDIO → AUX → SAT...) while the remote is in a programming mode. In the absence of a keypress entry, the mode buttons will stop illuminating after 30 seconds and the remote will exit the programming mode.
- The Point and Press® (Auto-Scan) Programming method allows you to program your remote control without using codes. Instead, the remote control automatically finds the correct setup code using certain buttons / commands that you select. Once you have found a setup codes that that operates your device, you then lock it in.
- When using the Point and Press® Programming Method, there are several important points to remember:
 - The order in which you program your electronic devices is not important.
 - There may be several codes that turn your electronic devices on / off (or perform other functions).
 - While the remote is searching for the correct setup code(s) for your electronic devices, it is possible that other (previously programmed) devices may turn on / off (or perform other functions). If this occurs, continue pressing the [▲] or [▼] buttons (or the buttons described in this section until you find the correct code for the device you are programming.
 - It may take several minutes for the remote to find the correct code that turns your device on / off (or performs another selected function). During this time, the mode buttons will illuminate in rotation (i.e. SAT → TV → DVD → AUDIO → AUX → SAT...).

- Once you lock-in a code, be sure to check the available functions for that device (i.e. TV - Vol ▲/▼, Mute, TV Input (TV / VCR button), Ch ▲/▼, 0-9; VCR - Play, Stop, Rew...; DVD - Play, Stop, Rew...; AUDIO - Vol ▲/▼, Mute) to see if they are operating.

4. When programming the remote control using the [▲] or [▼] buttons (Power function) under the Point and Press® Programming method, you may find a code that turns a device off but not back on. If this happens...

- The correct code has not been found as you may you may have a code that operates some but not all of the functions of your device. Continue pressing [▲] until your device turns back on.

OR

- You may have gone past the correct matching code. Try pressing [▼] one press at a time until you find a code that turns your device back on.

5. When using the Point and Press® Programming method, you can also program your remote using the following buttons:

- [VOL ▲] – to “go forward” through the codes using the “VOL ▲” function on your devices.
- [VOL ▼] – to “go back” through the codes using the “VOL ▼” function on your devices.

Note: When you find the correct code, the volume of the device being programmed will increase or decrease.

- [CH ▲] - to “go forward” through the codes using the “CH ▲” function on your devices.
- [CH ▼] - to “go back” through the codes using the “CH ▼” function on your devices.

Note: When you find the correct code, the channel of the device being programmed will increase or decrease.

- [▶▶] - to “go forward” through the codes using the “Fast Forward” function on your devices.
- [◀◀] - to “go back” through the codes using the “Rewind” function on your devices.

Note: When you find the correct code, the fast-forward or rewind function of the device being programmed will be performed. To simplify programming using these buttons, insert a VHS tape or DVD in the device being programmed.

Rev. 04/06
 © 2006, Contec Holdings, LLC
 Point and Press® and Memory Guard® are registered trademarks of Contec Holdings, LLC

TV Setup Codes

Admiral	026	054	211	213
Advent	072	094	425	447 463
Adventura	047			
Aiwa	214	471		
Akai	053	462	473	
Amark	023	215		
Amstrad	157			
Anam	217	218	219	220 221
	222	223		
AOC	053	073	095	108
APEX	030	038	427	
Astar	462			
Audiovox	220	191	168	051 451
	465			
Belcor	073			
Bell & Howell	211	213		
Broksonic	165	167		
Brokwood	073			
Candle	068	091		
Centurion	095	107	108	
Citizen	068	091	211	213 233
Concerto	073	095		
Contec	147			
Coronado	023			
Craig	223			
Crown	023			
Curtis Mathes	016	054	107	108 211
	213			
Daewoo	051	068	073	095 158
	159	189	191	194 196
	197	198	200	202 204
	205	206	207	209
Daytron	073	095	107	108
Dell	448	094	072	463
Dumont	073			
Electro Home	073	095		
Elektra	353			
Emerson	016	023	053	064 103
	139	158	159	164 165
	166	167	168	169 392
	400	401	402	408 415
Envision	073	095		
ESA	454	456		
Fisher	355	356		
Funai	047	048	157	168 211
Fujitsu	460	469		
Gateway	426			

GE	015 018 042 044 049		107 109 110 216 384		Sony	014 020 021 178
	054 055 068 073 090		394 395 398 399 417		Soundesign	091
	095 101 102 103 389		108		Squareview	157
	390 396 403 406 407	Montgomery Ward	022 023 026 053 071		Superscan	419
	092		072 108 211 213		Supre-Macy	380
Gibraltar	023 048 053 068 073	NEC	028 068 090 108 200		Sylvania	068 071 072 090 091
	090 095 107 108 233		464			093 107 108 157 158
	360	Net TV	426			419 092 456 466
Goldstar (LG)	023 053 068 073 090	Norcent	455 472		Symphonic	047 157
	107 108 233 360 361	Orion	019 159 160 161 162		Tatung	044 446
Gradiente	104		163 382		Techwood	068
Grundig	233	Panasonic	042 043 044 045 046		Teknika	023 068 072 091 168
Go Video	443		429			213 463
Hall Mark	073 095	Philco	023 053 068 071 072		Telerent	023 213
Hitachi	023 068 095 096 097		091 463		Tera	381
	098 099 100	Magnavox (Philips)	023 068 071 072 073		Tevion	065 414
Hyundai	453		089 090 091 092 093		TMK	068 090
Inkel	364		094 134 385 387 397		Toshiba	030 031 038 039 423
Insignia	450 461 456		404 419 463 472		Totevision	233
JC Penney	039 053 068 073 092	Pilot	073 094 233		Universal	068 102
	095 102 355	Pioneer	111 144 383		Vidtech	068
Jensen	062	Planar	474		ViewSonic	428
JVC	104 105 106 396 397	Polaroid	384 394		Vizio	095 454
	410	Portland	023 068		Wards	068 090
Kawasho	073 095	ProScan	055 070		White Westinghouse	211 408 449 458
KMC	023	Prima	072		X30SVNAGAIll	468
KTV	023 053 233 366	Proton	090 371 372		XR-1000	213
Konka	445 168	Protron	457 467		Yamaha	068
Kosch	462	Proview	459		York	090 108
Kurazai	211 213	Pulsar	073		Zenith	047 048 049 050 051
LG (Goldstar)	023 053 068 073 090	Quasar	044			391 405 406 434
	107 108 233 360 361	Radio Shack	073			
Lodgenet	211 213	Realistic	022 166 168			
Logik	211 213	RCA	042 052 053 054 055		VCR Setup Codes	
Luxman	068 073 095		069 070 416 068		Admiral	066 075
LXI	024 026 157 345 355	Sampo	090 108		Aiwa	132
	388	Samsung	015 016 017 023 031		Akai	269 275 336 351 352
Mag	459		090 107 108 134 147			354
Magnavox (Philips)	023 068 071 072 073		151 153 386 411		Audio Dynamics	243 291
	089 090 091 092 093	Sansui	423 424		Bell & Howell	238 357
	094 134 385 387 397	Sanyo	353 355 356 376 377		Broksonic	333 337 358 359
	404 419 463 472	Scott	090 108 168		Canon	086 362
Majestic	211 213	Sceptre	468		Citizen	033 172 247 331
Marantz	053 107 108 109	Sears	023 031 038 039 068		Colortyme	291
Megatron	215		353 355 356 030		Craig	172 363
Memorex	090 211 213 355 388	Sharp	016 022 023 024 025		Curtis Mathes	086 112 247 291
	405 423		026 027 028 029 393		Daewoo	033 343 344 345 346
Mintek	470		395 409			347 342
MGA / Mitsubishi	053 068 073 090 095	Signature 2000	023 026 108 211 213			

Daytron	345	365			
DBX	243	291			
Dynatech	132				
Emerson	033	086	132	326	327
	331	332	333	334	335
	336	337	338	339	340
	341	342			
Fisher	035	081	357	363	238
Funai	132				
GE	086	172	174	170	
Go Video	348	349	350	331	
Goldstar (LG)	247	331			
Harman Kardon	291				
Hitachi	078	132			
Instant Replay	086				
JC Penney	078	086	172	238	291
JCL	086				
JVC	120	128	243	247	250
	253	238			
Kenwood	120	132	238	243	247
LG (Goldstar)	247	331			
Lloyd	132				
Logik	367				
LXI	132	331			
Magnavox (Philips)	086	132	183		
Marantz	086	172	183	238	247
	291				
Marta	331				
Matsui	368				
Memorex	132	238	331	363	369
	370				
Mitsubishi	255	258			
MTC	132	172			
Montgomery Ward	066	170	173	373	
Multi Tech	132	172	367		
NEC	120	238	243	291	374
	375				
Orion	322	326	327	328	329
	330				
Panasonic	112	117	430	086	
Pentax	078				
Philco	086	132	183		
Philips (Magnavox)	086	132	183		
Pioneer	078	120	263		
Portland	345				
ProScan	170	174			
Quartz	238	378			
Quasar	112				
RCA	078	132	141	170	172

	173	174	086		
Realistic	066	132	238	363	
Samsung	269	271	275	276	278
Sansui	120	367	379		
Sanyo	238	346	357	363	
Scott	033	332	367		
Sears	035	078	238	331	363
Sharp	066	075			
Shintom	367				
Signature 2000	066	170	173	373	
Sony	056	058	060		
Soundesign	132				
Sylvania	086	132	141	183	184
	322	324	420		
Symphonic	132				
Tandy	132	238			
Tashiko	331				
Tatung	243				
Teac	132	243			
Technics	086				
Teknika	132	331	359		
Thomas	132				
TMK	338				
Toshiba	033	035	078	081	
Totevision	172	331			
Unitech	172				
Vector Research	291				
Video Concepts	132	291			
Wards	066	132	172	247	331
XR-1000	367				
Yamaha	132	243	291	238	
Zenith	058	120	122	128	132
	435				

DVD Setup Codes

Aiwa	495				
Apex Digital	193	227	489		
Axion	491				
B144	146				
Cyberhome	490	496	498		
Daewoo	494				
Denon	201	203			
DVD-Video	199	484			
ECA	156				
GE	150	152	156	175	
Goldstar (LG)	129	133	135	179	260
Go-Video	129	486			

Gradiente	212	234			
Harman Kardon	256	259			
Hitachi	149				
JVC	177	179			
JVC-RM-SDR013J	475	476	477	478	
Kenwood	228				
KLH	248	252			
LG (Goldstar)	129	133	135	179	260
Liteon	499	500			
Magnavox	/ 138	143	146	484	
Philips					
Marantz	270				
Mintek	432				
Mitsubishi	181	185			
Multimedia	482				
Gateway					
NAD	246				
Onkyo	085	244			
Panasonic	115	118	121	124	431
Philips	/ 138	143	146	484	
Magnavox					
Pioneer	125	187	188		
Polaroid	497				
Proceed	236				
Protron	DVD- 488				
Video					
Replay TV	422				
Samsung	192	224	225	487	493
Sharp	034	076	077	079	
Sony	040	059	061	436	479
	480	481			
Sylvania	421	484			
Thomson	156	237			
TiVo	418				
Toshiba	082	085	087	113	
Yamaha	121	124	210		
Yamakawa	485				
Zenith	129	133	135	483	

Audio Setup Codes

CD Players

ADC	318			
Akai	249	261		

Aiwa	176				
Carver	176	155			
Crown	154				
Denon	273				
Fisher	230	274			
Goldstar (LG)	308				
Harman Kardon	315				
JVC	297				
Kenwood	131	176	274	289	299
Krol	176				
LG (Goldstar)	308				
Magnavox (Philips)	037	084	119	296	
Mission	176				
Mitsubishi	245	249			
NAD	182	231	290		
Nakamichi	264	319			
NEC	235				
NSM	176				
Onkyo	300				
Panasonic	184	266	437		
Philips (Magnavox)	037	084	119	296	433
Pioneer	116	127			
Quasar	184				
Radio Shack	186	190	266	279	289
RCA	295	037	119		
Sanyo	230	309			
SAE	176				
Scott	186				
Sharp	288	289			
Sony	067	292	293		
Soundesign	148	242	311	320	
STS	318				
Sylvania	084				
Teac	186				
Technics	184	208	317		
Toshiba	290				
Yamaha	280				

Fosgate Audionics	305				
Goldstar (LG)	036				
Harman Kardon	130	257	305	306	
Hitachi	240				
Jensen	140				
JVC	114	241			
Kenwood	063	277	444		
LG (Goldstar)	036				
Luxman	281				
Magnavox	080	463			
Marantz	282	283	284	285	
NAD	286				
Onkyo	126	171	304		
Optimus	142	229	321		
Panasonic	032	074	438	441	
Parasound	323				
Philips (Magnavox)	080				
Pioneer	123	137	251	298	
Quasar	032				
Radio Shack	229	267			
RCA	439				
Realistic	226	268			
Rotel	310				
Samsung DVD	/ 492				
Reciever					
Sansui	283				
Sanyo	195				
Scientific Atlanta	312				
Scott	272				
Sharp	294				
Sherwood	229	267			
Sony	041	057	232	287	442
Soundesign	083	088	239	265	
SSI	313				
Taekwang	142				
Teac	314	316			
Technics	032				
Wards	063				
Victor	114	241			
Yamaha	145	254	303		
Zenith	036	083	088	239	265

Receivers / Amplifiers

Adcom	325				
Aiwa	301				
Akai	142				
Bose	302	440			
Carver	155	180			
Denon	262	307			
Everquest	136				
Fisher	063	180			

15. Using Your IRC550 Remote Control

Yellow hi-lites are new and need translation

-
- Select Mode of remote. Press ...
 [SAT] - for Satellite mode
 [TV] - for TV mode
 [DVD] - for DVD mode ●
 [AUDIO] - for Audio mode
 [AUX] - for Auxiliary mode
- For future interactive TV applications ●
- Return to previous screen ●
- Highlight (▲, ▼, ◀, ▶) menu screen items,
 Navigate listings in Browse banner ●
- Display Interactive Programming
 Guide, Press again to remove ●
- Satellite, VCR, DVD, Audio transport
 functions ●
- Mutes volume ●
- Increase or decrease volume ●
- Display Interests menu, exit any menu ●
- In guide mode, cycles through favorite
 channel listings; default is All Channels;
 while watching TV, channel steps UP
 through pre-set favorite channels listing
 selected in guide mode. ●
- Enter channel # - 3 digits ●
- Display help screens, press again to
 remove ●
- Power for selected device ●
- Exit any menu, display program
 information ●
- Select highlighted item ●
- Display detailed program information ●
- In guide mode, advances forward in 6-
 hour increments. ●
- Returns to last channel viewed ●
- Increase or decrease channel ●
- Display current program title at
 bottom of screen ●
- Display pay-per-view programming ●
- Display Options menu, exit any menu ●
- Displays parental control menu ●
- For future interactive TV applications ●
- Input source to SAT receiver or TV ●

15. Comment utiliser votre télécommande IRC550

Pour sélectionner le mode de votre télécommande. Appuyez sur l'une des touches suivantes :

- [SAT] – mode satellite
- [TV] – mode TV
- [VCR] – mode VCR
- [DVD] – mode DVD
- [AUDIO] – mode AUDIO

For future interactive TV applications

Retourner au menu précédent

Sélectionné à l'aide des flèches ▲, ▼, ◀, ▶ les émissions affichées à l'écran du menu. Vous permet aussi de naviguer dans la liste des canaux affichés dans la liste de balayage

Afficher le guide de programmation interactif. Appuyez de nouveau sur la touche pour faire disparaître le guide

Fonctions pour votre récepteur satellite, votre magnétoscope, votre lecteur DVD ou vos appareils audios

Mettre le volume en sourdine

Ajuster le volume

Afficher le menu « Intérêts ». Vous permet aussi de quitter n'importe quel menu

In guide mode, cycles through favorite channel listings; default is All Channels; while watching TV, channel steps UP through pre-set favorite channels listing selected in guide mode.

Afficher les écrans d'aide. Appuyez de nouveau sur la touche pour faire disparaître ces écrans



Mettre en marche l'appareil sélectionné

Quitter n'importe quel menu et pour afficher des renseignements sur les émissions en cours

Syntoniser un canal en surbrillance

Afficher des renseignements détaillés sur l'émission en cours

In guide mode, advances forward in 6-hour increments.

Retourner au dernier canal syntonisé

Syntoniser les canaux en ordre croissant ou décroissant

Afficher le titre de l'émission en cours au bas de l'écran

Afficher la programmation de la télé à la carte

Afficher le menu « Options ». Vous permet aussi de quitter n'importe quel menu

Afficher le menu de surveillance parentale

For future interactive TV applications

Entrer le numéro du canal que vous voulez syntoniser – trois (3) chiffres

Source d'entrée au récepteur satellite ou au téléviseur