



Polaris Remote Control Télécommande Polaris



Users Guide
Guide d'utilisation
www.urcsupport.com

TABLE OF CONTENTS

Quick Start Guide	3
Program Control of Your Television	3
Operate Your satellite receiver	4
Operate Your Television	5
Turn on Backlighting	5
Introduction	7
Features and Functions	8
Key Charts	9
Device Table	11
Installing Batteries	11
Programming TV or TV/VCR or DVD Combination Device Control ..	12
Searching for Your Code	13
Checking the Codes	14
Troubleshooting	15
FCC Notice	15
Additional Information	16
TABLE DES MATIÈRES	17
Manufacturer's TV (or DVD/VCR TV Combination Device) Codes (Codes du fabricant)	36
Setup Codes for TVs	36
Setup Codes for Cable Boxes/Converters	43
Setup Codes for Cable/DVR/PVR Combination	44
Setup Codes for DBS/DVR/PVR Combos	45
Setup Codes for Satellite Receivers	45
Setup Codes for TV/DVD Combos	47

QUICK START GUIDE

Welcome to the Polaris Remote Control Quick Start Guide. To start using your remote control right away, just follow the steps below.

Note: This Quick Start Guide assumes your Polaris Remote Control has battery power. If your remote control does not have power, please refer to the section, See “Installing Batteries” on page 11.

Your Polaris Remote Control preprogrammed to control and operate the Star Choice satellite receiver and was designed for comfort, convenience, and simplicity. Use the **TV** and **SAT** keys to turn the power on and off for your television and satellite receiver. The **Volume** and **Mute** keys are locked to control your TV’s volume, and all other functions control your satellite receiver.

PROGRAM CONTROL OF YOUR TELEVISION

You can control your television and your satellite receiver with your Polaris Remote Control. Follow these steps to program the Polaris remote control to control your TV.


Note: Please refer to “Device Table” on page 11 to find out which devices you can program onto each device key.

1. Turn on the device you wish to control.
2. Press the **TV** key. The key blinks once. Then press and hold the **SETUP** key until the **TV** key blinks twice.




3. Use the “Manufacturer’s TV (or DVD/VCR TV Combination Device) Codes (Codes du fabricant)” on page 36 to locate the type of device and its brand name. Enter the first four-digit code for that device and brand. If the code

is valid, the device key blinks twice. If the key emits a single, long blink, then the code entry was invalid. Try steps 2 and 3 again, using the same code.


-  Aim the remote control at the device you want to control. Press the key for that device once (either **TV** or **SAT**). If the device turns off, then you have successfully programmed your remote control for that device. If the device does not turn off, then repeat steps 2 through 4 using the codes listed for your TV brand until you have found the code for that device.
- Repeat steps 1 through 4 above for the next device you want to control (either your television or satellite receiver).

OPERATE YOUR SATELLITE RECEIVER

Your Polaris Remote Control is now ready to operate your satellite receiver. You can use your remote control to turn your satellite receiver on and off, and to change the channel.

-  To turn on your satellite receiver, press **SAT**. The **SAT** key blinks once and your satellite receiver turns on. To turn off your satellite receiver, press **SAT**. The **SAT** key blinks once and your satellite receiver turns off.

To change the channel, do the following:

-  Use the remote control's **CH+** and **CH-** keys to navigate to the channel you wish to view, one channel at a time.

OPERATE YOUR TELEVISION

To turn on your television, press **TV**. The **TV** key blinks once and your television turns on. To turn off your television, press **TV**. The **TV** key blinks once and your television turns off.

To Control your television:

1. Use the **VOL** key to raise or lower the volume of your television. To raise the volume, press **VOL+**. To lower the volume, press **VOL-**.

VOL



Note: See “Key Charts” on page 9 to get an overview of the functions of all the keys available on your Polaris Remote Control.

TURN ON BACKLIGHTING

Your Polaris Remote Control has a feature that allows backlighting of all its keys. When backlighting is turned on, the keys to your remote control are lit when you press them. To enable backlighting, do the following:

1. Quickly press **SETUP** twice. All the keys to your remote control are lit for a few seconds, allowing you to easily see them in low-light conditions. After you have activated backlighting, any time you press a key, the selected device key (either **TV** or **SAT**) blinks once. After the device key blinks, all the keys on your Polaris Remote Control are lit for a few seconds.

SETUP



To disable backlighting, do the following:

1. Quickly press **SETUP** twice. Keys no longer are lit when you press them. The selected device key (either **TV** or **SAT**) still blinks once when you press a key.



Congratulations! You can now use your Polaris Remote Control to operate the most essential functions of your home entertainment system. To learn more about this remote control's convenient features, please refer to the rest of this User Guide, starting with the section, “Features and Functions” on page 8.

INTRODUCTION

The Polaris Remote Control by Universal Electronics is our latest generation universal remote control. It provides easy and comfortable access to the remote-control functions you'll need to use most often. Moreover, it's packed with advanced, friendly features such as:

- Preprogrammed control to operate the satellite receiver supplied by Star Choice
- Simple, two-button operation
- No power key
- Essential keys embossed for easy identification and operation
- Backlit keys
- Code Search to help program control of older or discontinued components


Before using the product, you need to install the enclosed batteries and also perform some programming to operate the specific home entertainment devices you wish to control.

Please follow the instructions detailed in this manual to set up the unit and then start enjoying your new remote control and cable service.







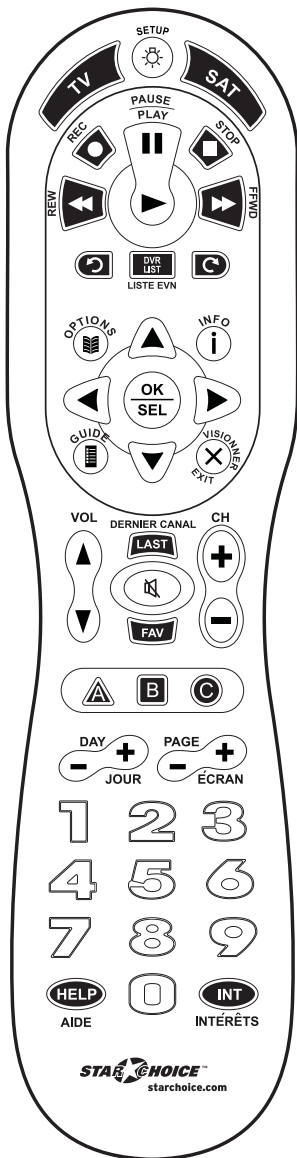


FEATURES AND FUNCTIONS












Use the illustration below to locate features on the Polaris Remote Control and then study the Key Charts (on the next three pages) to learn how they function.

To find out what type of devices can be controlled by each device key after programming, see “Device Table” on page 11.



Key Charts

Key	Function
 SETUP	Use SETUP for all programming sequences. Quickly press SETUP twice to enable backlighting of all the keys on your Polaris Remote Control. After backlighting has been enabled, quickly press SETUP twice to disable backlighting.
	To turn on your television or satellite receiver, press TV or SAT once. Each device key has an embedded LED (red light) that blinks upon selection and indicates the remote control is working and (after programming) is sending signals. When backlighting is enabled, all the keys on your remote control are lit when you press any key.
 GUIDE	Press GUIDE to display the program guide.
 MENU	Press OPTIONS once to display the Options menu.
 INFO	Press INFO to display the current channel and program information.
	In Guide mode, press DAY+ (or DAY-) to move a day forward (or back) on your satellite receiver's program guide (applies only to receivers with picture in guide).
	Press the navigator keys to move the cursor in the program guide and menu screens and to navigate within the interactive service. Press OK/SELECT to select the highlighted program in Guide mode or Menu option.
	Press PAGE+ (or PAGE-) to page up (or page down) through menu screens and the program guide.
 EXIT	Press EXIT to exit out of your satellite receiver's menu and guide.

Key	Function
	Use A , B , or C to access additional satellite features (see your satellite receiver's manual).
VOL 	Press VOL+ (or VOL-) to raise (or lower) the TV volume.
	In Guide mode, press FAV to cycle through your favorite channels stored in your satellite receiver (applies only to receivers with picture in guide only). For receivers without picture in guide, pressing FAV displays the menu to "Choose Day" to advance the guide to a future day of the week.
CH 	Use CH+ (or CH-) to select the next higher (or lower) channel.
	Press MUTE once to turn the sound off or on.
	Press LAST once to recall the last channel.
	Press INT to display the Interests menu options.
	Press SKIP BACK once to instantly shuttle a recorded program back by 10 seconds (applies only to satellite receivers equipped with a digital video recorder, DVR530HD).
	Press SKIP FORWARD to instantly shuttle a recorded program forward by 30 seconds (applies only to satellite receivers equipped with a digital video recorder, DVR530HD).
	Press DVR LIST once to display a list of recorded programs (applies only to satellite receivers equipped with a digital video recorder, DVR530HD).
	Use REC , REW , PLAY , FFWD , STOP , and PAUSE to control receivers with DVR feature, or to control VCR or DVD/TV combination devices. To record in the VCR mode, press REC twice.



Key	Function
1 2 3 4 5 6 7 8 9 0	Use the keypad numbers (1-9, and 0) to directly tune channels (e.g., 09).

 Press **HELP** to display help menus.


Device Table

NOTE: Please refer to the table below when performing the instructions in “Programming TV or TV/VCR or DVD Combination Device Control” on page 12.

After programming, the Polaris Remote Control can control the following types of devices:

Device Key	Controls these types of devices
	Satellite receiver The SAT key turns your satellite receiver on and off.
	Television The TV key turns your television on and off.

INSTALLING BATTERIES

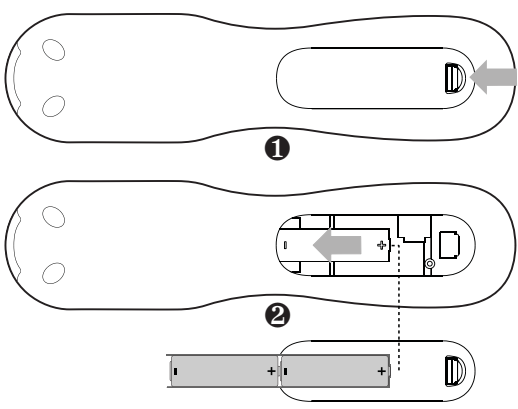

1. On the back of the remote control, push the tab and lift off the battery cover.
2. Locate the two (2) enclosed AA batteries. Match the + and - marks with those in the battery case, then insert them. Align the

cover's keys with the case's holes and press the cover back into place. The tab should click when the cover is locked.

3. Test the remote control by pressing any mode key (e.g., **TV**). If the batteries are inserted correctly, the LED (red light) blinks once.



NOTE: When batteries need replacement, the remote control ceases to operate. Replace the batteries and the unit is restored to its full functionality, complete with your favorite settings.

PROGRAMMING TV OR TV/VCR OR DVD COMBINATION DEVICE CONTROL

The Polaris Remote Control is preprogrammed to operate the satellite receiver provided by Star Choice, and an RCA TV. To control a TV (or VCR/DVD TV combination device other than RCA, perform the following steps; otherwise skip this section.

1. Turn on the TV.

NOTE: Please read steps 2 through 4 completely before proceeding. Highlight or write down the codes of the TV you wish to program before moving on to step 2.

2. On the remote control, press a device key once (i.e., **TV** or **SAT**); it blinks once. Then press and hold **SETUP** until the selected mode key blinks twice.



3. Use the "Manufacturer's TV (or DVD/VCR TV Combination Device) Codes (Codes du fabricant)" starting on page 36) to locate the TV brand name and then enter the first four-digit code for your TV. If performed correctly, the selected mode key blinks twice.

NOTE: If the selected mode key emits a long blink, the entry is invalid. Repeat steps 2 through 3 and try entering the same code again.

4. Aim the remote control at the device (either TV or SAT) and press the key for that device once. The device should turn off. If it does not, repeat steps 2 through 3, trying each code for your brand until you find one that works. If it still does not respond, try searching for the code (see "Searching for Your Code" on page 13).



5. For future reference, write down each working device code in the spaces provided on the following page.

TV Code

--	--	--	--

Device Type: _____

SEARCHING FOR YOUR CODE

If your home entertainment device does not respond to the Polaris Remote Control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

To search for a code for your TV:

1. Turn on your TV.
2. On the remote control, press **TV** once; it blinks once. Then press and hold **SETUP** until the **TV** key blinks twice.



3. Enter **9 9 1**. The **TV** key blinks twice.



4. Aim the remote control at the TV and press **TV** once.



5. Continually press and release **CH+** until the TV turns off. Stop when the TV turns off.



NOTE: In the search mode, the remote control sends IR codes from its library to the selected device, starting with the most popular code first.

6. If the TV does not turn back on, slowly press **CH-** until the TV turns on.



7. Press **SETUP** once to lock in the code. The **TV** key blinks twice.



CHECKING THE CODES

If you have set up the Polaris Remote Control by searching for your device code (on the previous page), you may need to find out which four-digit code is operating your equipment. To find out which code is operating your TV:

1. On the remote control, press **TV** once; it blinks once. Then press and hold **SETUP** until the **TV** key blinks twice.



SETUP



2. Enter **9 9 0**. The **TV** key blinks twice.



3. To view the code for the first digit, press **1** once. Count the number of times the **TV** key blinks (e.g., 3 blinks = 3) and write down the number in the leftmost TV Code box on page 13.



NOTE: If a code digit is 0, the selected mode key does not blink.

4. Repeat step 3 three more times for the remaining digits. Use **2** for the second digit, **3** for the third digit, and **4** for the fourth digit. Finish writing down the code in the TV Code boxes on page 13.



TROUBLESHOOTING

PROBLEM: Device key does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AA alkaline batteries (see “Installing Batteries” on page 11).

PROBLEM: Device key blinks when you press a key, but home entertainment device does not respond.

SOLUTION: Make sure you are aiming the remote control at your home entertainment device and that you are within 15 feet of the device you are trying to control.

PROBLEM: The remote control does not control home entertainment devices or commands are not performing properly.

SOLUTION: Try all listed codes for the device brand being set up. Make sure all devices can be operated with an infrared remote control.

PROBLEM: Tried Search Method and still could not find a working code.

SOLUTION: Try the Search Method again after clearing out the device key as follows:

- a. Press and hold **SETUP** until device key blinks twice.
- b. Enter **9 9 2**.
- c. Press and release the device key to be cleared twice.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been verified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

ADDITIONAL INFORMATION

This product does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your Polaris Remote Control.

©Copyright 2005 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without prior written permission of Universal Electronics Inc.

M1090F

04/06

MANUFACTURER'S TV (OR DVD/VCR TV COMBINATION DEVICE) CODES (CODES DU FABRICANT)

Setup Codes for TVs

Codes de configuration pour téléviseurs

A-Mark	0003
Abex	0032
Admiral	0093, 0463
Advent	0761, 0783, 0815, 0817, 0842, 1933
Adventura	0046
Aiko	0092
Aiwa	0701
Akai	0030, 0060, 0098, 0672, 0702, 0812, 1903
Alaron	0179, 0183, 0216
Albatron	0700, 0843
Ambassador	0177
America Action	0180
Ampro	0751
Anam	0004, 0009, 0068, 0180
Anam National	0055, 0161
AOC	0003, 0019, 0030, 0052, 0137, 0185
Apex Digital	0156, 0748, 0765, 0767, 0879, 1943
Archer	0003
Audiovox	0003, 0092, 0180, 0451, 0623, 0802, 0875, 1284, 1937, 1951, 1952
Aventura	0171
Axion	1937
Belcor	0019
Bell & Howell	0016, 0154
BenQ	1032, 1315
Boxlight	0893
Bradford	0180
Brockwood	0019
Broksonic	0003, 0180, 0236, 0463, 1935, 1938
Cadia	1283
Candle	0030, 0046, 0056, 0186
Carnivale	0030
Carver	0054, 0170
CCE	0217, 0329

Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Cinego	1986
Citizen	0030, 0039, 0046, 0056, 0060, 0092, 0186, 0280
Clairtone	0185
Clarion	0180
Commercial Solutions	0047, 1447
Concerto	0056
Contec	0157, 0158, 0180, 0185
Craig	0161, 0180
Crosley	0054
Crown	0039, 0180
Curtis Mathes	0016, 0030, 0039, 0047, 0054, 0056, 0060, 0093, 0145, 0154, 0166, 0451, 0466, 0702, 0747, 1147, 1347
CXC	0180
Daewoo	0019, 0039, 0066, 0067, 0091, 0092, 0451, 0623, 0661, 0672, 1661
Daytron	0019
Dell	1080, 1178, 1264, 1403, 1454
Denon	0145, 0511
Denstar	0628
Diamond Vision	1996, 1997
DMTech	1338
Dream Vision	1297
Dumont	0017, 0019
Durabrand	0003, 0171, 0178, 0180, 0463, 1034
Dwin	0093, 0720, 0747, 0774
Dynatech	0049
Electroband	0000, 0185
Electrograph	1755
Electrohome	0381, 0389, 0409
Emerson	0019, 0038, 0039, 0154, 0158, 0171, 0177, 0178, 0179, 0180, 0181, 0182, 0183, 0185, 0236, 0270, 0280, 0282, 0451, 0463, 0623, 1944, 1963
Envision	0030, 0813, 1365
Epson	0833, 0840, 1290

ESA	0171, 0812
Fisher	0154, 0159
Fujitsu	0179, 0186, 0683, 0809, 0853
Funai	0171, 0179, 0180
Futuretech	0180
Gateway	1755, 1756
GE	0021, 0027, 0029, 0047, 0051, 0055, 0135, 0138, 0174, 0178, 0251, 0279, 0282, 0451, 0747, 1347, 1447
Gibraltar	0017, 0019, 0030
Go Video	0886
GoldStar	0001, 0002, 0019, 0030, 0032, 0106, 0178, 0409
Goodmans	0360
Gradiente	0392
Grundig	0683
Grunpy	0179, 0180
Haier	0768, 1034
Hallmark	0178
Hannspree	1348, 1351, 1352
Hantarex	1338
Harley Davidson	0043, 0179
Harman/Kardon	0054, 0078
Harvard	0068, 0180
Havermy	0093
Helios	0865
Hello Kitty	0451
Hewlett Packard	1088, 1089, 1101, 1494, 1502
Hisense	0748
Hitachi	0016, 0032, 0038, 0056, 0095, 0097, 0145, 0151, 0173, 0227, 0279, 0409, 0413, 1145, 1960
HP	1088, 1089, 1101, 1494, 1502
Hyundai	0849
iLo	1286, 1990
Infinity	0054
Initial	1990
Inteq	0017
Janeil	0046
JBL	0054
JCB	0000

Jensen	0050, 0761, 0815, 0817, 1299, 1933
JVC	0036, 0053, 0069, 0160, 0169, 0182, 0731, 1253, 1352
Kamp	0216
Kawasho	0158, 0216, 0308
Kaypani	0052
KEC	0180
Kenwood	0019, 0030
KLH	0765, 0767, 1962
Kloss	0024, 0046, 0078
KMC	0106
Konka	0628, 0632, 0638, 0703, 0707
KTV	0030, 0039, 0180, 0183, 0185, 0217, 0280
LG	0178, 0442, 0700, 0856, 1178, 1265, 1325, 1993
Loewe	0136
Logik	0016
Luxman	0056
LXI	0047, 0054, 0148, 0154, 0156, 0178, 0747
Magnavox	0020, 0024, 0028, 0030, 0036, 0054, 0096, 0179, 0186, 0187, 0230, 0386, 0706, 0802, 1254, 1454, 1944, 1963
Majestic	0015, 0016
Marantz	0030, 0054, 0444, 0704, 0854, 0855, 1154, 1454
Matsushita	0250, 0650
Maxent	1755
Megapower	0700
Megatron	0003, 0145, 0178
MEI	0185
Memorex	0016, 0106, 0150, 0154, 0178, 0179, 0463
MGA	0019, 0030, 0150, 0155, 0178
Midland	0017, 0032, 0039, 0047, 0051, 0135, 0747
Mintek	1990
Minutz	0021
Mitsubishi	0014, 0019, 0093, 0098, 0150, 0155, 0178, 0331, 0358, 0836, 0868, 1250, 1550
Monivision	0700, 0843

Motorola	0055, 0093
MTC	0019, 0030, 0049, 0056, 0060, 0091, 0185, 0216
Multitech	0049, 0180, 0217
NAD	0156, 0178, 0866
NEC	0019, 0030, 0036, 0056, 0170, 0434, 0497, 0882, 1704
NetTV	1755
Nikko	0030, 0092, 0178, 0317
Noblex	0430
Norcent	0748, 0824, 1365
Norwood Micro	1286, 1296, 1303
Noshi	0018
NTC	0092
Olevia	1144, 1240, 1331
Onwa	0180
Optimus	0154, 0166, 0250, 0650
Optoma	0887, 1348
Optonica	0093, 0165
Orion	0179, 0236, 0463, 1463
Panasonic	0051, 0055, 0162, 0226, 0250, 0338, 0375, 0650, 1410, 1941, 1946, 1947
Penney	0002, 0003, 0018, 0019, 0021, 0027, 0030, 0032, 0039, 0047, 0051, 0060, 0110, 0135, 0138, 0149, 0156, 0178, 0309, 0747, 1347
Philco	0019, 0020, 0028, 0030, 0054, 0096, 0302
Philips	0054, 0690, 1154, 1454
Pilot	0019, 0030, 0039
Pioneer	0038, 0166, 0172, 0679, 0866, 1260
Polaroid	0765, 0865, 1276, 1314, 1316, 1326, 1327, 1328, 1991, 1992
Portland	0019, 0039, 0092
Prima	0761, 0783, 0815, 0817, 1933
Princeton	0700, 0717
Prism	0051
Proscan	0047, 0466, 0747, 1347, 1447
Proton	0003, 0031, 0052, 0178, 0466
Protron	1320, 1323
Proview	1498
Pulsar	0017, 0019

Quasar	0051, 0055, 0165, 0219, 0250, 0650
RadioShack	0019, 0030, 0032, 0039, 0047, 0056, 0154, 0165, 0178, 0180, 0409, 0747
RCA	0018, 0019, 0029, 0038, 0047, 0090, 0135, 0174, 0278, 0679, 0747, 1047, 1147, 1247, 1347, 1447, 1547, 1948, 1953, 1958
Realistic	0019, 0030, 0032, 0039, 0056, 0154, 0165, 0178, 0180
Rhapsody	0183, 0185, 0216
Runco	0017, 0030, 0251, 0497, 0603
Sampo	0030, 0032, 0039, 0052, 0100, 0110, 1755
Samsung	0019, 0030, 0032, 0056, 0060, 0178, 0217, 0329, 0408, 0427, 0587, 0702, 0766, 0812, 0814, 1060, 1312, 1395, 1903
Samsux	0039
Sansui	0463, 1935
Sanyo	0088, 0107, 0146, 0154, 0159, 0232, 0484, 0799, 0893, 1142
Sceptre	1360
Scimitsu	0019
Scotch	0178
Scott	0019, 0178, 0179, 0180, 0236, 0309
Sears	0015, 0047, 0054, 0056, 0146, 0148, 0149, 0154, 0156, 0159, 0168, 0171, 0178, 0179, 0281, 0747
Seleco	1297, 1351
Sharp	0039, 0093, 0153, 0157, 0165, 0220, 0281, 0386, 0398, 0491, 0688, 0689, 0818, 0851
Sheng Chia	0093
Shogun	0019
Signature	0016
SIM2 Multimedia	1297
Simpson	0186, 0187
Sole	0813
Sony	0000, 0011, 0080, 0111, 0273, 0353, 0810, 0834, 1100, 1317
Soundesign	0178, 0179, 0180, 0186
Sova	1320, 1952
Spectricon	0003, 0137
Squareview	0171

SSS	0019, 0180
Starlite	0180
Studio Experience	0843
Superscan	0093, 0864
Supre-Macy	0046
Supreme	0000
SVA	0587, 0748, 0768, 0865, 0870, 0871, 0872
Sylvania	0020, 0028, 0030, 0054, 0065, 0096, 0171, 0381, 1944, 1963
Symphonic	0171, 0180
Syntax	1144, 1240, 1331
Tandy	0093
Tatung	0003, 0049, 0055, 0396, 1101, 1285, 1286, 1287, 1288, 1361, 1756
Technics	0051, 0250
Technol Ace	0179
Technovox	0007
Techview	0847
Techwood	0003, 0051, 0056
Teknika	0016, 0019, 0039, 0054, 0056, 0060, 0092, 0150, 0175, 0179, 0180, 0186, 0312, 0322
Telefunken	0056, 0074, 0702
Tera	0031
Thomson	0209, 0210
TMK	0056, 0177, 0178
TNCi	0017
Toshiba	0036, 0060, 0149, 0154, 0156, 0650, 0832, 0845, 1156, 1256, 1265, 1325, 1343, 1356, 1360, 1656, 1704, 1935, 1945, 1971
Tosonic	0185
Totevision	0039
Trical	0157
TVS	0463
Ultra	0391
Universal	0027
Universum	1337
US Logic	1286, 1303
Vector Research	0030
Victor	0053

Video Concepts	0098
Vidikron	0054, 0242
Vidtech	0019, 0036, 0178
Viewsonic	0857, 0864, 0885, 1330, 1342, 1755
Viking	0046, 0312
Visart	1336
Vizio	0864, 0885, 1756
Wards	0016, 0019, 0020, 0021, 0027, 0028, 0029, 0030, 0054, 0056, 0080, 0096, 0111, 0165, 0174, 0178, 0179, 0202, 0866, 1156
Waycon	0156
Westinghouse	0000, 0451, 0885, 0889, 1282
White Westinghouse	0463, 0623
Yamaha	0019, 0030, 0769, 0833, 0839
Zenith	0016, 0017, 0092, 0178, 0463, 1145, 1265
Zonda	0003

Setup Codes for Cable Boxes/Converters
Codes de configuration pour décodeurs

ABC	0003, 0008, 0014, 0017
Americast	0899
Amino	1602, 1822
Bell & Howell	0014
Bell South	0899
Clearmaster	0883
ClearMax	0883
Coolmax	0883
Digeo	1187
Digi	0637
Director	0476
Dumont	0637
General Instrument	0003, 0276, 0476, 0810
GoldStar	0144
Hamlin	0009, 0273
i3 Micro	1602
Jerrold	0003, 0012, 0014, 0276, 0476, 0810
Memorex	0000
Motorola	0014, 0276, 0476, 0810, 1106, 1187, 1254, 1376, 1540

Multitech	0883
Myrio	1602, 1822
Pace	0008, 0237, 1877
Panasonic	0000, 0107
Panther	0637
Paragon	0000
Philips	0317, 1305
Pioneer	0144, 0533, 0877, 1877
Pulsar	0000
Quasar	0000
RadioShack	0883
RCA	1256
Regal	0273, 0279
Runco	0000
Samsung	0144
Sasktel	1737
Scientific Atlanta	0008, 0017, 0477, 0877, 1877
Sejin	1602
Sony	1006
Starcom	0003
Supercable	0276
Supermax	0883
Thomson	1256
Tocom	0012
Torx	0003
Toshiba	0000
Tristar	0883
V2	0883
Viewmaster	0883
Vision	0883
Vortex View	0883
Zenith	0000, 0525, 0899

Setup Codes for Cable/DVR/PVR Combination
Codes de configuration pour combinaison Câble/ VDR/ RVP

Americast	0899
Amino	1822
Digeo	1187
General Instrument	0476, 0810

Jerrold	0476, 0810
Motorola	0476, 0810, 1106, 1187, 1376, 1540
Myrio	1822
Pace	0237, 1877
Pioneer	0877, 1877
RCA	1256
Sasktel	1737
Scientific Atlanta	0877, 1877
Sony	1006
Supercable	0276
Thomson	1256
Zenith	0899

Setup Codes for DBS/DVR/PVR Combos

Codes de configuration pour combinaison DBS/ VDR/ RVP

Controlled by the Satellite

Contrôlés par le récepteur satellite

Amino	1615
DirecTV	0099, 0392, 0639, 1076, 1142, 1377, 1392, 1442, 1443, 1444, 1640
Dish Network System	0775, 1505
Dishpro	0775, 1505
Echostar	0775, 1170, 1505
Expressvu	0775
Hughes Network Systems	1142, 1442, 1443, 1444
JVC	1170
Motorola	0869
Philips	1142, 1442
Proscan	0392
RCA	1392
Samsung	1442
Sony	0639, 1640
Star Choice	0869

Setup Codes for Satellite Receivers

Codes de configuration pour récepteurs satellites

AlphaStar	0772
Amino	1615
Chaparral	0216
Coolsat	1806
Crossdigital	1109

DirecTV	0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1377, 1392, 1414, 1442, 1443, 1444, 1609, 1639, 1640, 1749, 1856
Dish Network System	0775, 1005, 1170, 1505, 1775
Dishpro	0775, 1005, 1505, 1775
Echostar	0775, 1005, 1170, 1505, 1775
Expressvu	0775, 1775
GE	0392, 0566
General Instrument	0869
GOI	0775, 1775
Goodmans	1246
Hisense	1535
Hitachi	0819, 1250
HTS	0775, 1775
Hughes	0749, 1442, 1749
Hughes Network Systems	0749, 1142, 1442, 1443, 1444, 1749
Humax	1790
iLo	1535
Jerrold	0869
JVC	0775, 1170, 1775
LG	1226, 1414
Magnavox	0722, 0724
Memorex	0724
Mitsubishi	0749
Motorola	0856, 0869
NEC	1270
Next Level	0869
Panasonic	0247, 0701
Pansat	1807
Paysat	0724
Philips	0099, 0722, 0724, 0749, 0819, 1076, 1142, 1442, 1749
Pioneer	1442
Proscan	0392, 0566
Proton	1535
RadioShack	0869

RCA	0143, 0392, 0566, 0855, 1392
Samsung	1108, 1109, 1142, 1276, 1377, 1442, 1609
Sanyo	1219
Sony	0639, 1639, 1640
Star Choice	0869
Tivo	1142, 1442, 1443, 1444
Toshiba	0749, 0790, 0819, 1285, 1749
UltimateTV	1392, 1640
Ultrasat	1806
Uniden	0722, 0724
US Digital	1535
USDTV	1535
Voom	0869
Zenith	1856

Setup Codes for TV/DVD Combos

Codes de configuration pour combinaison TV/DVD

Controlled by the TV

Contrôlés par le téléviseur

Advent	1933
Apex Digital	1943
Audiovox	1937, 1951, 1952
Axion	1937
Broksonic	1935
Cinego	1986
Diamond Vision	1997
Emerson	1963
Hitachi	1960
iLo	1990
Initial	1990
Jensen	1933
KLH	1962
LG	1993
Magnavox	1963
Mintek	1990
Panasonic	1941
Polaroid	1991
Prima	1933
RCA	1948, 1958

Samsung	1903
Sansui	1935
Sova	1952
Sylvania	1963
Toshiba	1935



M1090F 04/06